

THERMA-FUSER™

THERMALLY POWERED VAV DIFFUSER



MODULAR VAV SYSTEMS

INSTALLATION, BALANCING & MAINTENANCE

SIDEWALL MODELS:

- TLW-C** VAV cooling only
- TLW-CW** VAV cooling and warm up (constant volume heating)
- TLW-D** Manually adjustable diffuser
- TLW-RAD** Return-ducted
- TLW-RAP** Return-ceiling plenum

TABLE OF CONTENTS

Installation Instructions	1
System Balancing	2
Adjusting Temperature Setpoint	3
Maintenance	3
Controlling the System	3
Fire Walls	3
Dimensions	4
Minimum Flow	5
Model Designation	5
Trouble Shooting	5
Ten Year Warranty	6

DAMAGED FREIGHT CLAIM PROCEDURE

When the diffusers are received, inspect for damage which may have occurred during shipment. If damage is evident, it should be noted on the carrier's freight bill. A written request for inspection by the carrier's agent should be made at once.

STORAGE

Cartons should always be stacked on end. Do not stack cartons flat on their sides. Excessive weight may cause damage to the diffusers.

Do not store for prolonged times at temperatures exceeding 130°F/56°C.

IDENTIFICATION


Units are factory shipped two per carton. The model designation is on the unit and on the carton. See *Model Designation* on page 5.

INSTALLATION PRECAUTIONS

When installing units, make sure construction debris does not enter units or duct system.

Because models TLW-C and TLW-CW control room temperature by sensing the room air induced up the wall of the room, care should be taken not to disturb room air induction and entrainment. Avoid the possibility of anything, including furniture, below the diffuser which will block secondary air from entering the induction chamber. Of special concern are tall bookcases. See *Fig. 2*.

Fig 2. Do not block secondary room air

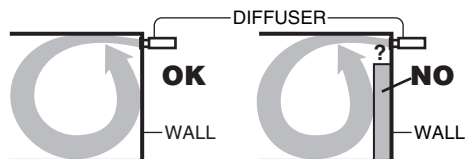


INSTALLATION INSTRUCTIONS

1. Inspect the carton for damage before opening. Notify carrier if external damage exists. Submit all claims for shipping damage to the carrier.
2. Move diffusers (in cartons) to installation area. Note unit identification.
3. Remove cardboard box and cardboard insert. Discard packaging material. Model TLW-C and TLW-CW have factory installed balancing stops which hold the blade(s) open. See *Fig. 6*. Do not remove those stops until after balancing.
4. Install ceiling, soffit and wall framework. Metal studs should be located horizontally both above and below the opening for the diffusers. See *Figs. 3 and 4*. If the diffuser is to be installed by sliding it into the opening, allow a minimum vertical space between the studs shown in the Table 1. Do not hang the gypsum board before installing the diffuser.

Table 1. Minimum opening height to slide diffuser in

MODEL	TYPE INLET	MIN. OPENING HEIGHT
One or Two Slots	Round Top	5¾ in. / 146 mm
	Rear Rectangular	4⅝ in. / 118 mm
Four Slots	Round Top	7¾ in. / 197 mm
	Rear Rectangular	6⅝ in. / 169 mm

Fig 3. Installing ceiling, soffit and wall framework

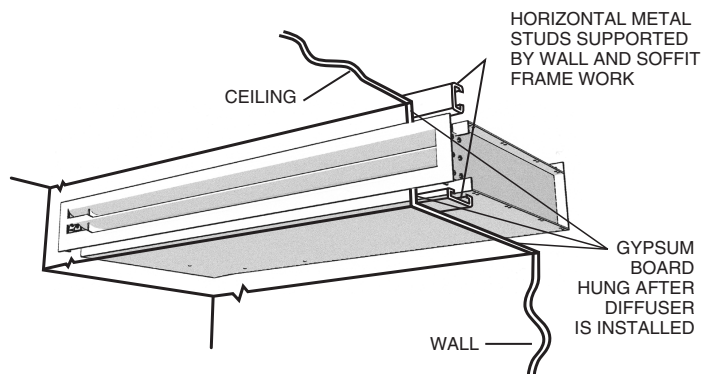

5. Install the diffuser. Either lay the diffuser on the soffit framework, See *Fig. 4*, or hang it from wires, See *Fig. 5*.
 - a. Do not block the induction nozzle on the control panel end of the diffuser. Note: The installation must have provision to vent the induction air either to the return air plenum or to the room.
 - b. Do not use screws or drill holes in the areas marked "No Holes or Screws" on the control panel end of the diffuser.
 - c. Do not install standard model TLW-C and TLW-CW linear Therma-Fuser units end-to-end. A 2 in./51mm clear space is required beyond the induction air outlet.
6. Connect and secure the supply duct to the inlet. Flexible duct should be installed as straight as possible and should NOT be formed in a centerline radius of less than 1½ times the duct diameter. Improper installation may result in performance to vary from published ratings.

Continued on NEXT Page

INSTALLATION INSTRUCTIONS—Continued

Figure 4. Laying on soffit framing


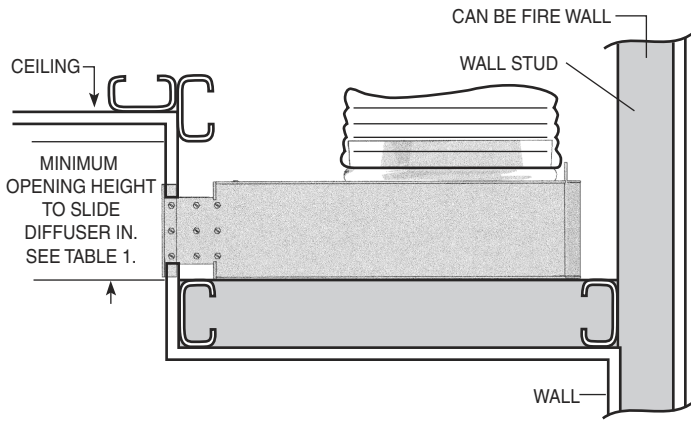


Figure 5. Holes for hanging

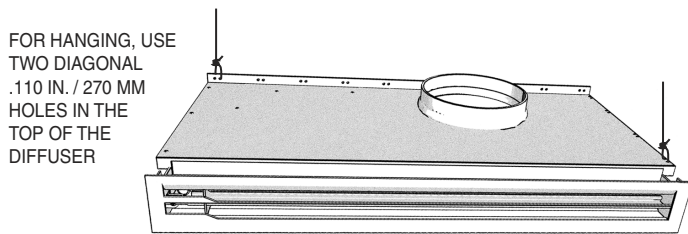


7. Hang the gypsum board. The gypsum board should extend behind all four sides of the diffuser face by 3/8 in./9.5mm. See Fig. 4.
8. Do NOT reset the temperature set point on the TLW-C and TLW-CW models until the space is occupied. It is factory pre-set for average conditions (74°F / 23°C).
9. Balance the system. See *System Balancing*.
10. After the air conditioning system is started and **after the space is occupied**, where necessary adjust the temperature setpoint to suit the occupant. See *Adjusting Temperature Setpoint*.

SYSTEM BALANCING (TLW-C and TLW-CW)

VAV systems are balanced for design air volume at maximum air flow and systems using Therma-Fuser VAV diffusers are no exception. When all the Therma-Fuser diffusers are set for maximum air flow by fully opening them, the system is really a constant air volume system and is balanced as a constant volume system. Manual balancing dampers should be used at the take off for each diffuser. Manual balancing dampers may not be required with ducts designed to Acutherm specifications. Contact Acutherm for duct specifications and alternate balancing procedure when no manual balancing dampers are used.

1. Prepare the system for balancing. (Make necessary checks for diversity, fan capacities, fan rotation, minimum outside air requirements, duct leaks and static pressure controller design settings. Set outside air control damper for minimum air and return air control damper for maximum air.)
2. Make sure Therma-Fuser diffusers are open. TLW-C and TLW-CW models are shipped with balancing stops in position to hold the blade(s) wide open. The stops are a wedge which should be wedged between the foam side of the blade and the curved aluminum piece below it (pushing the blade so that its back is in contact with the horizontal aluminum piece above it). See Fig. 6. For multiple blade units, all blades must be wedged open for proper balancing.

Fig 6. Balancing Stops

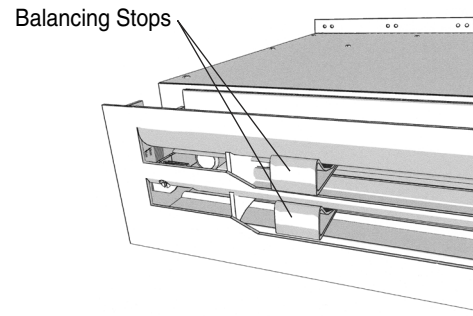


3. Start fans, adjust system for 100% air flow and make system checks. (Measure static pressure across filters and coils and at sensor for static pressure controller. Measure supply, return and branch duct air flow.)
4. Measure air flow from each Therma-Fuser diffuser and adjust damper at the duct takeoff to obtain design air volume. Air volume measurement may be made with a direct reading balancing hood or air velocity meter. If a velocity meter is used, the velocity is measured in the lower slot 2 in. / 51mm from either end of the blade at the opening between the outside blades and the curved aluminum piece. See Fig. 7. The A_k factors for the different linear lengths are shown in Table 2. Multiply the velocity in fpm times A_k in ft² to get air flow in cfm.

Table 2. A_k factors in ft.² for TLW Therma-Fuser diffusers fully open.

Type	A_k	Type	A_k	Type	A_k
TLW-2411	.07	TLW-2421	.12	TLW-2441	.31
TLW-3611	.11	TLW-3621	.20	TLW-3641	.42
TLW-4811	.14	TLW-4821	.28	TLW-4841	.60
TLW-6011	.22	TLW-6021	.32	TLW-6041	.70

5. Return Therma-Fuser diffusers to operating condition. Remove balancing stops by grabbing the looped end and pulling straight out from the face.
6. Return the remainder of the system to operating condition.

Figure 7. Location of Velometer

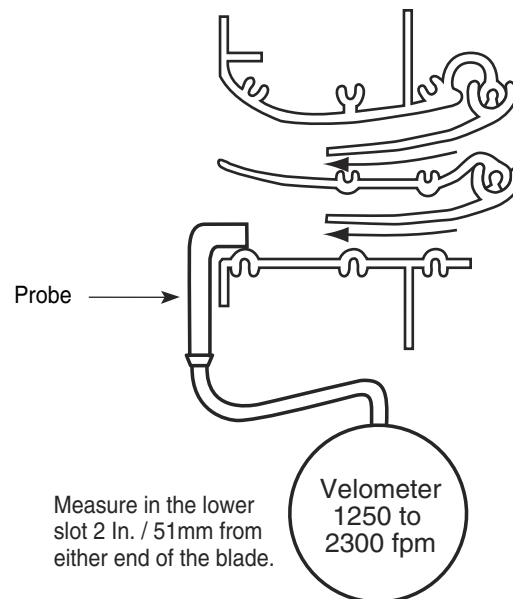

ADJUSTING TEMPERATURE SETPOINT (TLW-C and TLW-CW)


The room temperature set point is adjusted by turning the phillips screw with a phillips screwdriver to move the thermostat in or out. Four slot units have two thermostats, each controlling two slots, which are separately adjusted. The temperature scale, located behind the thermostat slide, can be viewed at the end of the diffuser slot. Each graduation on the temperature scale is 1°F/.55°C providing an easy way of determining the amount of adjustment. Turning the phillips screw clockwise will move the slide out over the temperature scale for a cooler set point. Turning the phillips screw counterclockwise moves the thermostat slide in to a warmer setpoint. About 1½ turns will change the set-point by 1°F/.55°C.

The diffuser is factory set to maintain approximately 74°F/23°C. It is not necessary to adjust the temperature set point at time of installation. Instead, make any adjustments after the system has been started and the space is occupied. Then adjust only those Therma-Fuser difusers where occupants are uncomfortable at the factory set point.

Readjust to the factory set point by turning the phillips screw clockwise (cooler set point) until the thermostat slide hits the stop. Then turn counter clockwise (warmer) for nine turns.

Figure 8. Adjusting Temperature

Read the temperature set point at the bottom of the thermostat slide.

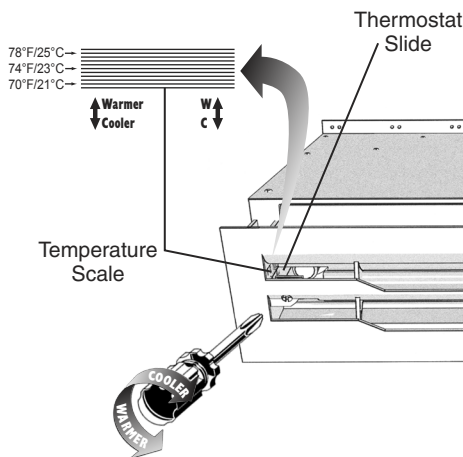

RECOMMENDED ADJUSTMENTS FOR VARIOUS CONDITIONS

Mode	Room Temp.	Blade Position	Recommended Action
Cooling	Too Cold	Open	Adjust for higher room temperature set point.
		Closed	Therma-Fuser diffuser is correct. Check if cooling is still required, and if not, turn cooling unit off.
TLW-C TLW-CW	Too Warm	Open	Therma-Fuser diffuser is correct. Check for lack of air or for too warm air temperature.
		Closed	Adjust for lower room temperature set point.
Too Noisy	Any	Any	Reduce static pressure. Recommended static pressure is .05 to .25 in. wg / 12 to 62 Pa at the inlet of the diffuser.

MAINTENANCE

The moving parts of the TLW Therma-Fuser diffuser have no maintenance or lubrication requirements. We are often asked to recommend periodic maintenance procedures and a spare parts stock. Recommended maintenance is to clean the outer surfaces of the Therma-Fuser diffuser—nothing else. We do not recommend stocking any spare parts. Our customers also confirm that stocking is unnecessary.

CONTROLLING THE SYSTEM (TLW-C and TLW-CW)

References:

- System Design, p 4, TLW brochure, Form 23.1.
- Chapters 2.2, 3.1 and 3.2, pp 6, 7 and 8, Designing Modular VAV Systems, Form 5.2.
- Air Handling and Fan Coil Units Subzoned with Therma-Fuser VAV modules, Form 6.7.
- DX Equipment Zoned with Therma-Fuser VAV Modules, Form 6.5.

SUPPLY AIR TEMPERATURE

The source of cooling is controlled from supply air temperature. As with all VAV systems, the goals are to achieve a constant supply air temperature (may be reset to another constant supply air temperature) and to limit the supply air temperature. Limits for cooling supply air temperature should be between 50°F/10°C and 68°F/20°C. These objectives are best achieved by modulating chilled water valves, and other variable equipment from supply air temperature. On/off equipment such as DX compressors are cycled from supply air temperature. Use a discharge air sensor for the supply air temperature signal.

For TLW-CW models, mode change between heating, recirculation and cooling is controlled from room temperature. Signals from one or more room temperature sensors may be used for mode change. When using more than one sensor, a “majority rules” approach is recommended. Constant volume heating temperature for TL-CW models should be as low as possible but no lower than 80°F / 26.5° C.

STATIC PRESSURE

As with all VAV systems, the fan must run continuously during occupied times. Goals of static pressure control are to provide enough static pressure to obtain the required air volume especially at the diffuser farthest from the fan, to avoid diffuser noise by limiting static pressure at both full flow and turndown and to provide pressure independence or consistent operation as the system flow changes.

These objectives can be achieved with the usual methods of automatic static pressure control: bypass dampers, discharge dampers, zone dampers, and fan control (variable speed drives, inlet dampers, etc.). Locate the static pressure sensor as far down the duct as possible—at least 2/3 down the duct from the first takeoff.

FIRE WALLS

For soffit installations, the fire wall can be extended up behind the diffuser. See Fig. 3.

For installations with the diffuser face flush with the wall, the fire wall should be extended beneath the diffuser and then up behind it. See Fig. 9.

A fire damper should be installed in the supply air duct where it penetrates the fire wall.

Figure 9. Fire Wall Around Diffuser



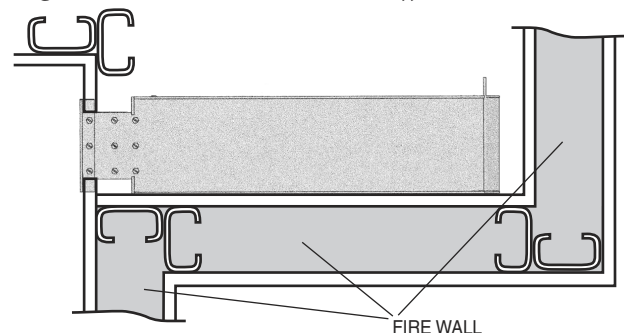


Fig 1. Dimensions—install as close to ceiling as possible

MODELS TLW-C, TLW-CW, TLW-D and TLW-RAD WITH TOP ROUND INLET (PREFERRED)

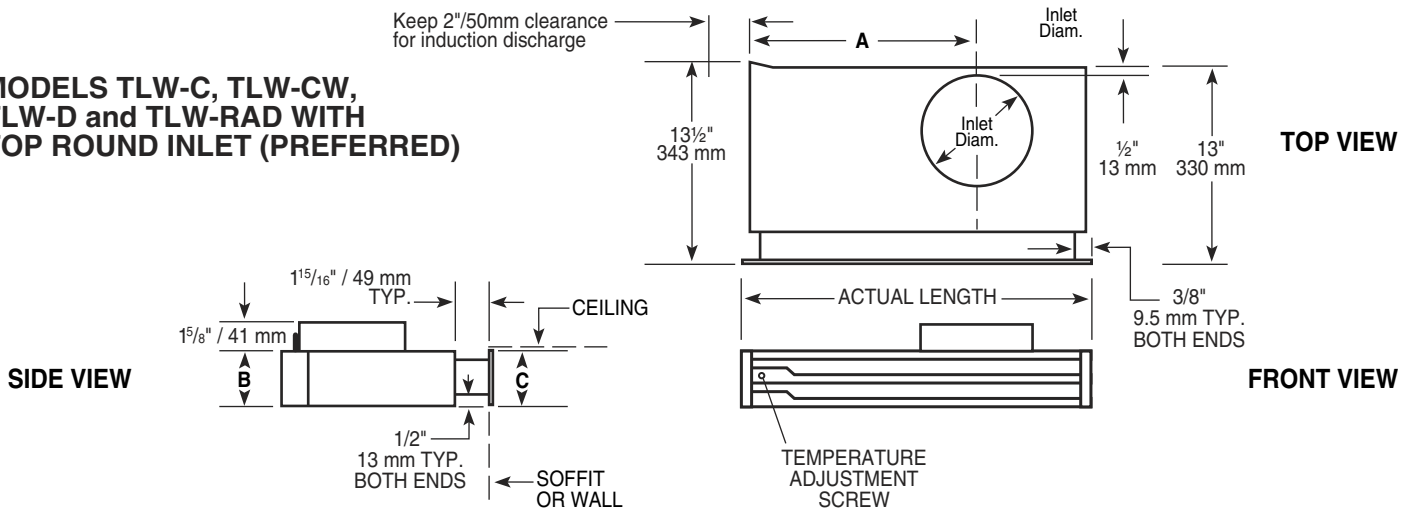

MODELS TLW-C, TLW-CW, TLW-D and TLW-RAD WITH OPTIONAL REAR RECTANGULAR INLET

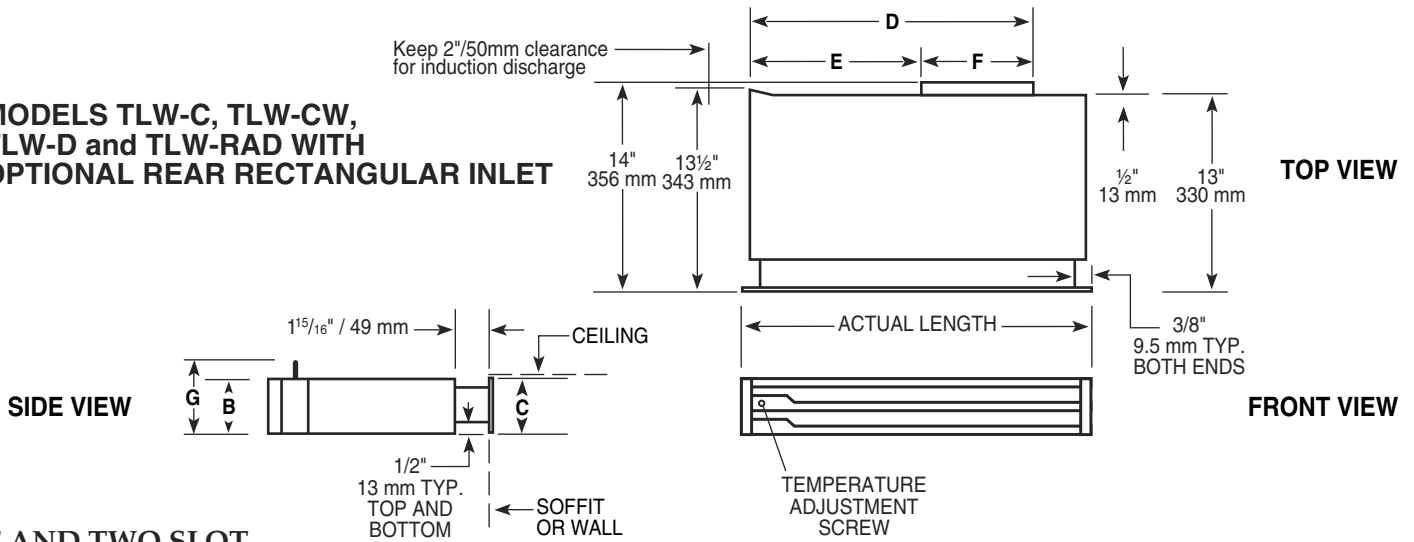

ONE AND TWO SLOT

Nominal Length	Actual Length	Round Diameter	Optional Rectangular Inlet	A	B	C		D	E	F	G
						1 Slot	2 Slot				
24 (2411, 2421)	23 3/4 in. 603mm	5 7/8 in. 150mm	4 x 8 in. 102 x 204mm	1 5/16 in. 383mm	4 in. 102mm	2 9/16 in. 65mm	3 3/4 in. 95mm	1 9 3/4 in. 502mm	1 1 3/4 in. 298mm	8 in. 203mm	4 5/8 in. 118mm
36 (3611, 3621)	35 3/4 in. 908mm	5 7/8 in. 150mm	4 x 8 in. 102 x 203 mm	2 1 1/16 in. 535mm	4 in. 102mm	2 9/16 in. 65mm	3 3/4 in. 95mm	2 6 7/8 in. 683mm	1 18 7/8 in. 479mm	8 in. 203mm	4 5/8 in. 118mm
48 (4811, 4821)	47 3/4 in. 1213mm	7 7/8 in. 200mm	4 x 16 in. 102 x 406mm	2 8 1/16 in. 713mm	4 in. 102mm	2 9/16 in. 65mm	3 3/4 in. 95mm	3 6 7/8 in. 937mm	2 20 7/8 in. 530mm	16 in. 406mm	4 5/8 in. 118mm
60 (6011, 6021)	59 3/4 in. 1518mm	7 7/8 in. 200mm	4 x 16 in. 102 x 406 mm	3 4 1/16 in. 865mm	4 in. 102mm	2 9/16 in. 65mm	3 3/4 in. 95mm	3 6 7/8 in. 937mm	2 20 7/8 in. 530mm	16 in. 406mm	4 5/8 in. 118mm


Note: Dimensions inches ± 1/16 millimeters ± 1.6 mm

FOUR SLOT

Nominal Length	Actual Length	Round Diameter	Optional Rectangular Inlet	A	B	C	D	E	F	G
24 (2441)	23 3/4 in. 603mm	7 7/8 in. 200mm	6 x 10 in. 152 x 254mm	1 6 1/16 in. 408mm	6 in. 152mm	6 in. 152mm	2 1 3/4 in. 552mm	1 1 3/4 in. 298mm	10 in. 254mm	6 5/8 in. 168mm
36 (2641)	35 3/4 in. 908mm	7 7/8 in. 200mm	6 x 10 in. 152 x 254mm	2 2 1/16 in. 560mm	6 in. 152mm	6 in. 152mm	2 6 7/8 in. 683mm	1 16 7/8 in. 429mm	10 in. 254mm	6 5/8 in. 168mm
48 (4841)	47 3/4 in. 1213mm	9 7/8 in. 250mm	6 x 18 in. 152 x 457mm	2 9 1/16 in. 738mm	6 in. 152mm	6 in. 152mm	3 8 7/8 in. 987mm	2 20 7/8 in. 530mm	18 in. 457mm	6 5/8 in. 168mm
60 (6041)	59 3/4 in. 1518mm	1 11 7/8 in. † 300mm †	6 x 18 in. 152 x 457mm	3 7 7/16 in. 926mm	6 in. 152mm	6 in. 152mm	3 8 7/8 in. 987mm	2 20 7/8 in. 530mm	18 in. 457mm	6 5/8 in. 168mm

† Oval shaped inlet

Fig 1. Dimensions—continued

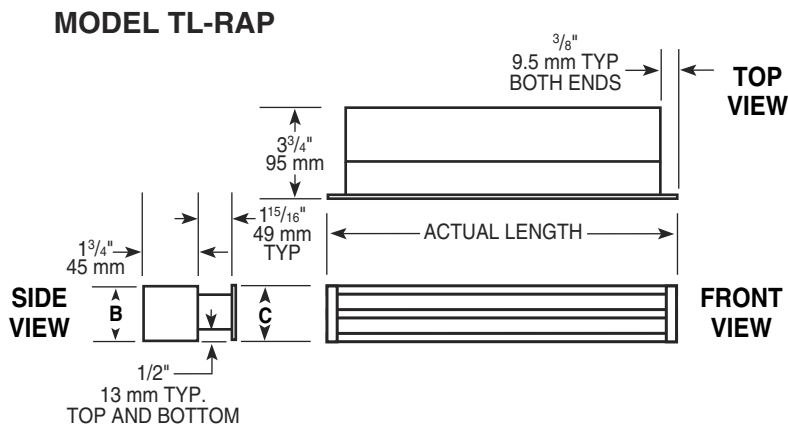

MINIMUM FLOW (TLW-C and TLW-CW)

Standard TLW units have a 10% leakage. To obtain higher minimum flows, a shorter length of blade gasket (foam) for each blade can be factory installed or it can be field removed per the table below. The blade gasket must be removed at the end opposite from the induction slot.

Amount of Gasket to be Removed from each Blade

Length Designation	Minimum Flow as a % of Maximum Flow	
	20%	30%
24	5 in. / 128 mm	10 in. / 254 mm
36	8 in. / 204 mm	11 in. / 280 mm
48	11 in. / 280 mm	16 in. / 407 mm
60	14 in. / 356 mm	28 in. / 712 mm

MODEL DESIGNATION

- Therma-Fuser—Linear
 - TL = Ceiling Lay in*
 - TLC = Ceiling Continuous*
 - TLW = Sidewall
- Type-C = VAV cooling only
 - CW = VAV cooling plus warm-up (fully opens for constant volume heating with supply air temperature above 80°F/26.5°C)
- D = Manually adjustable diffuser
- RAD = Ducted return air
- RAP = Ceiling plenum return air
- Nominal Length—24, 36, 48 or 60 inches. 72 inches available for type RAP only.
- Number of slots—1, 2 or 4
- Blow direction—1 way
- Factory installed options
 - I = Internal insulation
 - R = Rectangular inlet
 - A1 = Heater for remote adjust 1 and 2 slots
 - A2 = Heater for remote adjust 4 slot only.

TLW-CW-48 21-I

* See separate dimensions and separate instructions for models TL-XX and TLC-XX.

TROUBLE SHOOTING (TLW-C and TLW-CW)

Trouble shooting Therma-Fuser diffusers requires looking at the system as a whole. Before examining the Therma-Fuser diffuser for failure it is worth the time to be sure the system is functioning properly and that something has not been overlooked. Before calling Acutherm, please complete the data log for all Therma-Fuser diffusers to be evaluated.

SYSTEM CHECK LIST

The system should be:

- Delivering 50°- 68°F/10° - 20°C supply air when in the cooling mode.
- Delivering 80°-120°F/26.5° - 49°C supply air when in the heating mode. (TLW-CW only)
- Maintaining static pressure at the inlet to each Therma-Fuser diffuser between .05 and .25"wg/12 and 62 Pa.

THERMA-FUSER DIFFUSER CHECK LIST

Once the above checks have been completed, examine and record the following (conditions may vary over time; several measurements at different times may be required):

- Room temperature 4 ft / 1.2 m above the floor directly under the Therma-Fuser diffuser.
- Supply air temperature at the inlet of the Therma-Fuser diffuser.
- Static pressure at the inlet of the Therma-Fuser diffuser.
- Cooling setpoint(s). See Fig 8. Read the cooling setpoint(s) by counting the lines from the bottom of the scale to the bottom of the slider.
- Blade opening(s). Look into the diffuser slot and observe the blade position. Is it fully closed, fully open or part way between? Is the gasket installed on the full length of each blade?
- If possible, measure air flow with a flow hood or measure air velocity as shown in Fig 7.
- Is there anything below the diffuser which blocks secondary air from the induction chamber?
- Are the ends of the diffusers at least 2 in. / 50 mm apart?
- Is construction or other debris clogging the perforated plate in the inlet?.

TROUBLE SHOOTING DATA LOG

Location	Type Diffuser		Date	Time	Room Temp	S.A. Temp	Duct S.P.	Set Point(s)	Blade Opening	Air Flow
	Length	No. Slots								

TEN YEAR WARRANTY

Acutherm warrants that its Therma-Fuser diffusers, exclusive of any options and accessories (whether factory or field installed) shall be free from defects in material or workmanship for a period of ten (10) years from the date of shipment and agrees to repair or replace, at its option, any parts that fail during said ten (10) year period due to any such defects which would not have occurred had reasonable care been taken, provided that such parts have been inspected by Acutherm and found defective and provided the diffusers have been given normal and proper usage and all parts and controls remain unaltered. Acutherm makes NO WARRANTY OF MERCHANTABILITY OF PRODUCTS OR OF THEIR FITNESS FOR ANY PURPOSE OR ANY OTHER EXPRESS OR IMPLIED WARRANTY WHICH EXTENDS BEYOND THE LIMITED WARRANTY ABOVE. ACUTHERM'S LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM DEFECTS SHALL IN NO EVENT EXCEED THE COST OF REPAIR OR REPLACEMENT OF PARTS FOUND DEFECTIVE UPON EXAMINATION BY ACUTHERM. IN NO EVENT SHALL ACUTHERM BE LIABLE FOR INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR DAMAGES FOR INJURY TO PERSONS OR PROPERTY. Acutherm shall not be responsible for freight to or from its plant in connection with the inspection, repair or replacement of parts under the terms of this limited warranty nor for cost or installation.



6379 Clark Ave Suite 280
Dublin CA 94568, USA
Tel: +1 510 785 0510
<http://www.acutherm.com>
e-mail: info@acutherm.com