

THERMA-FUSER™


THERMALLY POWERED VAV DIFFUSER



MODULAR VAV SYSTEMS

TL MINIMUM FLOW

Minimum flow on a Model TL Therma-Fuser diffuser is achieved by removing some of the foam that seals the blade when it closes. The foam is removed from the end of the Blade nearest the End Panel.

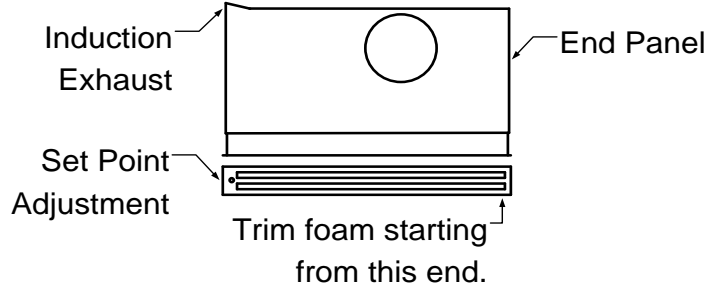

For a minimum flow of:	Trim inches of foam from each blade			
	TL Length			
	24 in	36 in	48 in	60 in
15%	2 5/8	4 1/8	5 5/8	7 1/8
20%	5 1/8	8 1/8	11 1/8	14 1/8
25%	7 6/8	12 2/8	16 6/8	21 2/8
30%	10 3/8	16 3/8	22 3/8	28 3/8

